

# BEAVERTAIL REPLACEMENT BOARD

INSTALLATION INSTRUCTIONS

## **COMPONENTS**

### STANDARD

- Beavertail Replacement Board AS 2.1
- 2 Plate-head screws TX20 4 × 30mm
- 3 Compressible tape 15×30×180 mm



### TOOLS REQUIRED



Screwdriver with bit set: Torx TX20


## **INSTALLATION**






Create an opening.



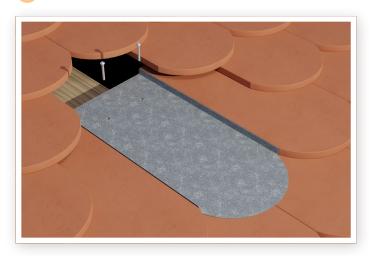


Bring the Beavertail Replacement Board into position and screw it tight.



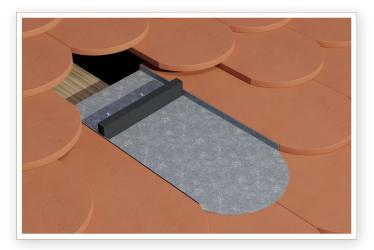

Apply compression tape just below the screws.



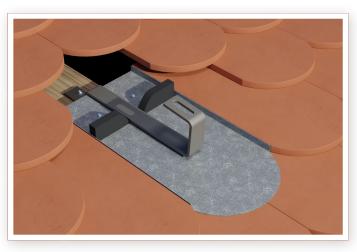

Fit roof hooks as described in the document "Mounting instructions AS2.1 Tiled roof."





Put the Beavertail Replacement Board back into position.



## CONGRATULATIONS, WELL DONE!

### **CONTACT HEADQUARTER**

ALUMERO Systematic Solutions GmbH Sonnenweg 1-2 5162 Seeham - Österreich

T +436217 / 68 41 - 0 F +436217 / 68 41 - 41 solar@alumero.at

www.alumero.at